


HOW TO MEASURE FOR WINDOW BLINDS



OUTSIDE FIX / FACE FIX

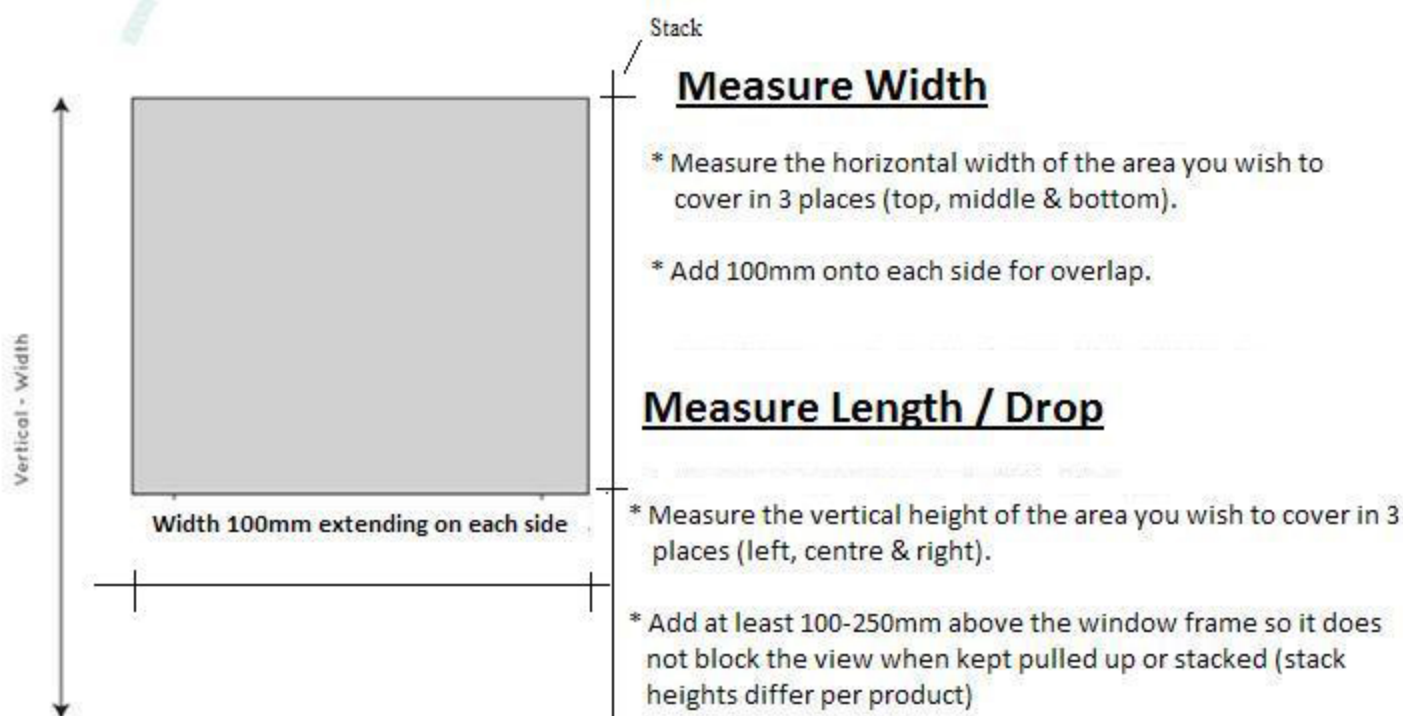

INSIDE MOUNT / TOP FIX

Measure Width

- * Measure the horizontal width of the inside of the window frame (for inside mount) in 3 locations (top, middle & bottom). This is the width of the blind.

Measure Length / Drop

- * Measure the vertical height of the inside of the window frame (for inside mount) in 3 locations (left, middle & right). This the length / height of the blind.

